


entelligent Power Management App Guide

 
 




THE E10 IS  
**PUTTING THE POWER  
BACK IN YOUR HANDS.**

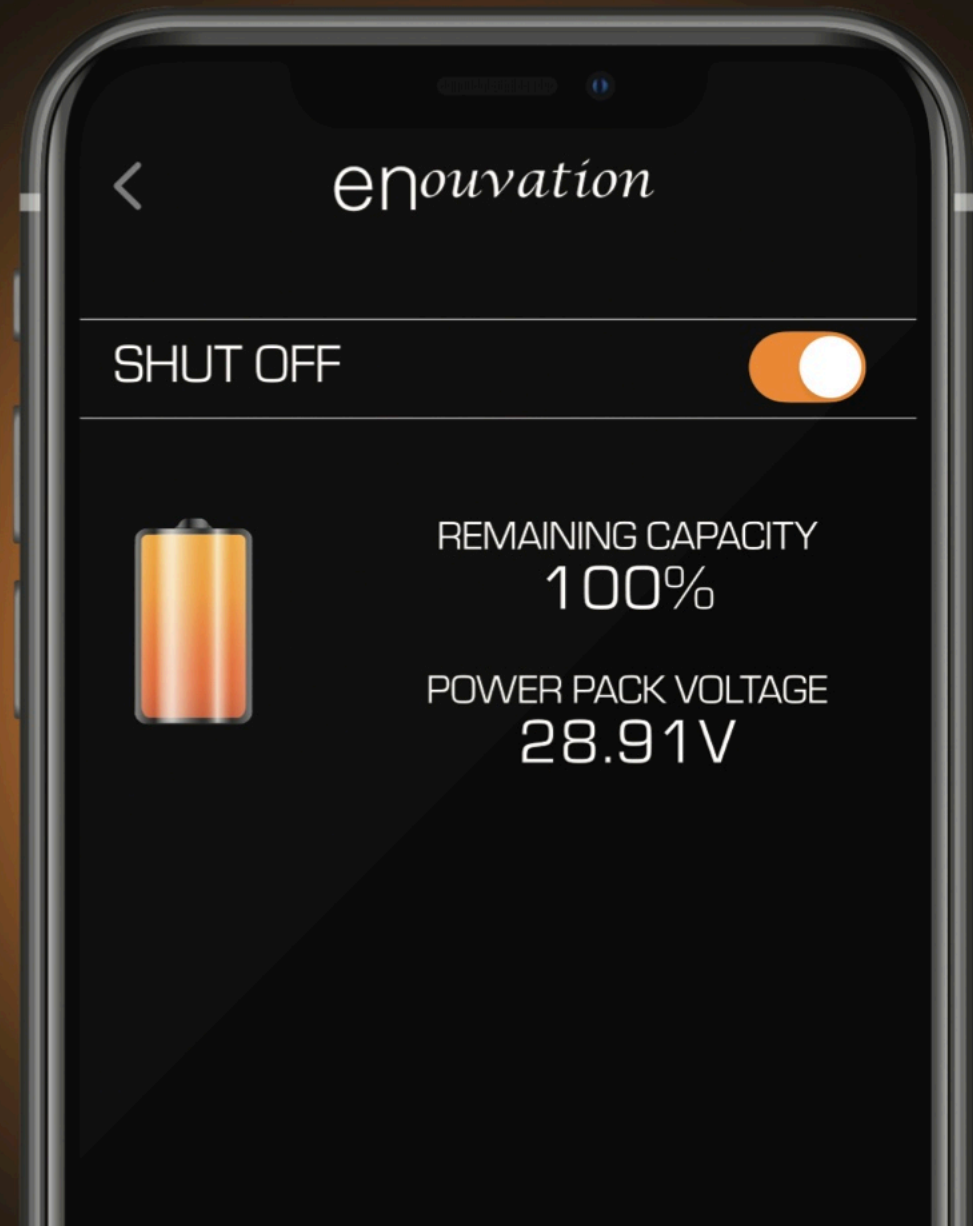

**Download and install the  
Entelligent™ App to get started**



Apple and the Apple logo are registered trademarks of Apple Inc. Google Play and the Google Play logo are trademarks of Google LLC.



**Congratulations, and thank you for purchasing from Enovation!**

Before getting started, please take the time to read the instructions and safety warnings. Your safety is extremely important to us.

Power Packs have become mainstream household items. They are not toys and can be extremely dangerous if misused, damaged, or compromised.



- 1 Charging Input Port
- 2 Power Output Port
- 3 Low Power Audio Speaker
- 4 Manual Power Switch
- 5 LED Power Level Indicator
- 6 LED Power Level Wake Button



entelligent  
Power Management App



Apple and the Apple logo are registered trademarks of Apple Inc. Google Play and the Google Play logo are trademarks of Google LLC.



**Turn the E10 manual power switch to ON to get started.**


## Setting up the Entelligent App

Open the Entelligent App on your device and follow this guide to:

- 1 Name Your Pack
- 2 Set Up a Location
- 3 View/Manage Charging History
- 4 Set Notifications for Low Power Alerts
- 5 Turn On/Off
- 6 Manage Notifications
- 7 Check/Update Firmware


Note: Some screen images are simulated and are provided for reference only. User interface will vary by device.

### 1 Name Your Pack

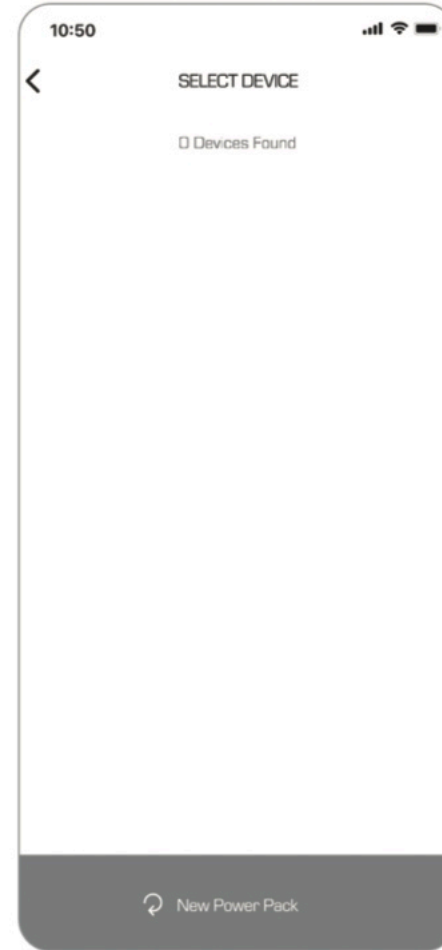


Turn the E10 manual power switch to ON and open the Entelligent App on your device.

NOTE: Please keep Bluetooth and Location Services ON on your device to create and maintain a connection to your pack.

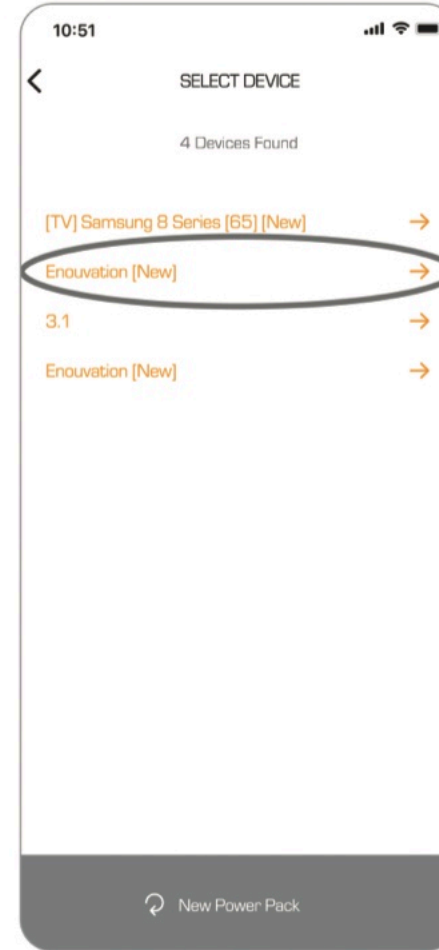


Select your E10.

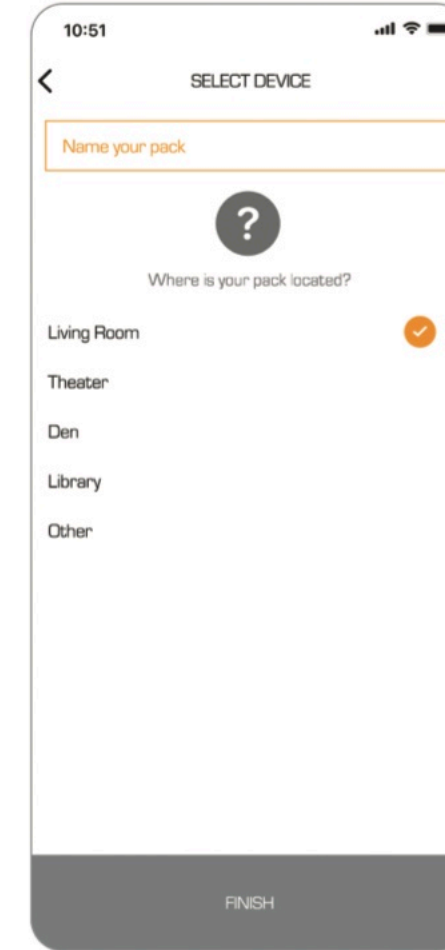


Name your E10.

This will be how you identify each Power Pack if you have multiple units.

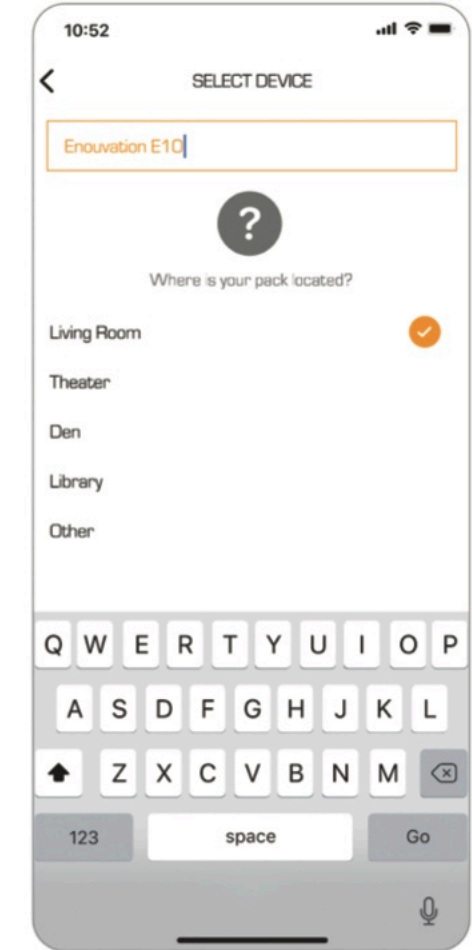


We've named this pack "Enouvation E10."


## 2 Set Up a Location

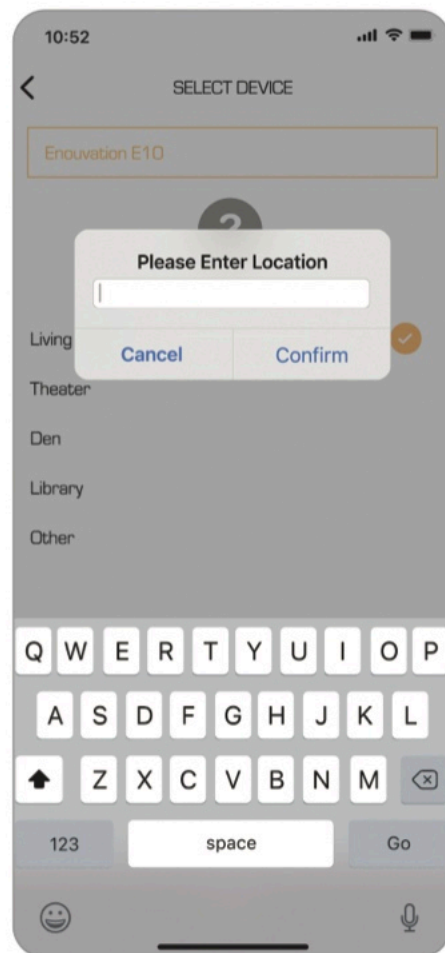

Now select a location for the named pack.  
You can select from list or customize by selecting OTHER.

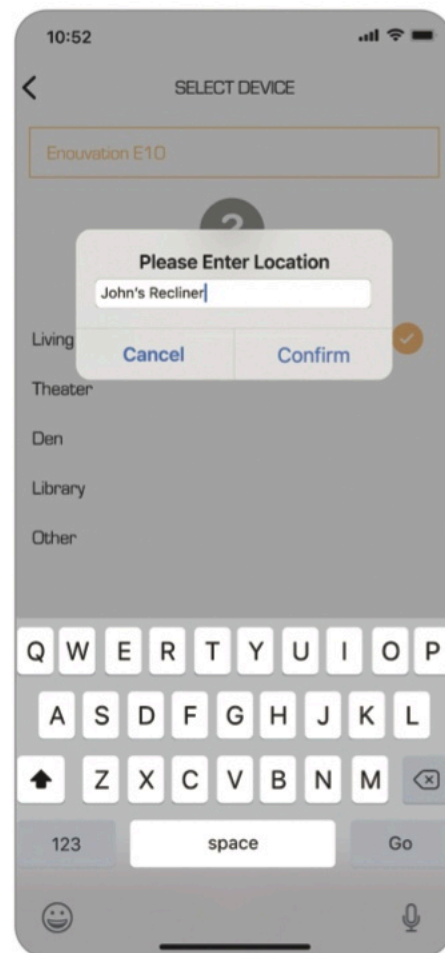


We've named our location  
"John's Recliner."

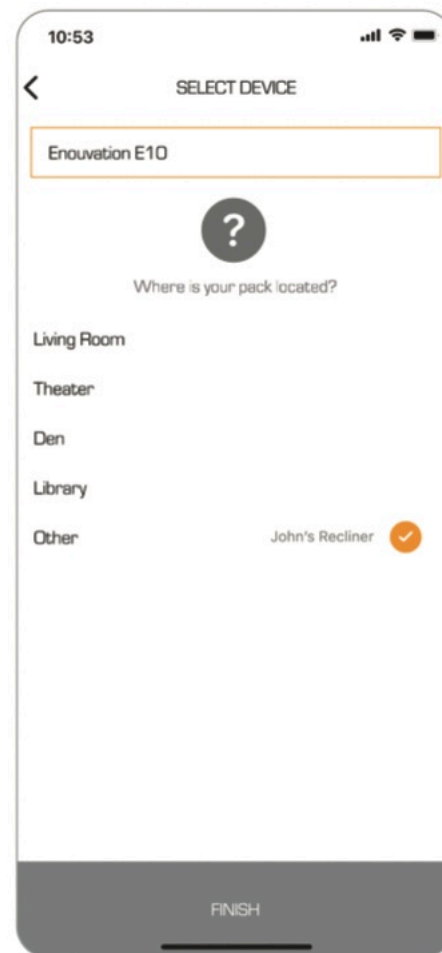

When selecting a location, an orange icon  
will appear.

When a location is customized, it will  
appear next to OTHER in the list.

Confirm name is correct and click FINISH.

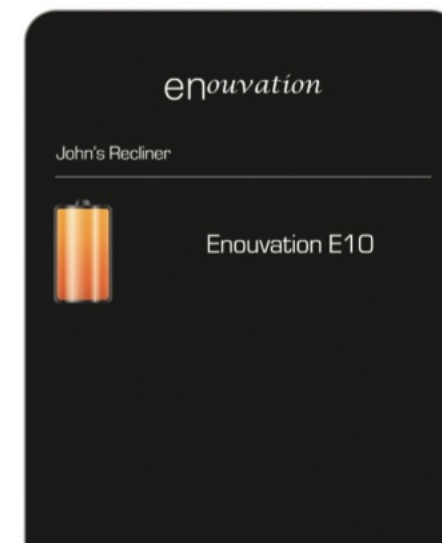


Your E10 is now ready.  
The Pack name and location will appear  
on the screen.

If you have more than one Pack, they  
will be listed by location on this screen.



To delete a pack, swipe left and tap  
DELETE. To reconfigure a pack, start  
over from step 1.

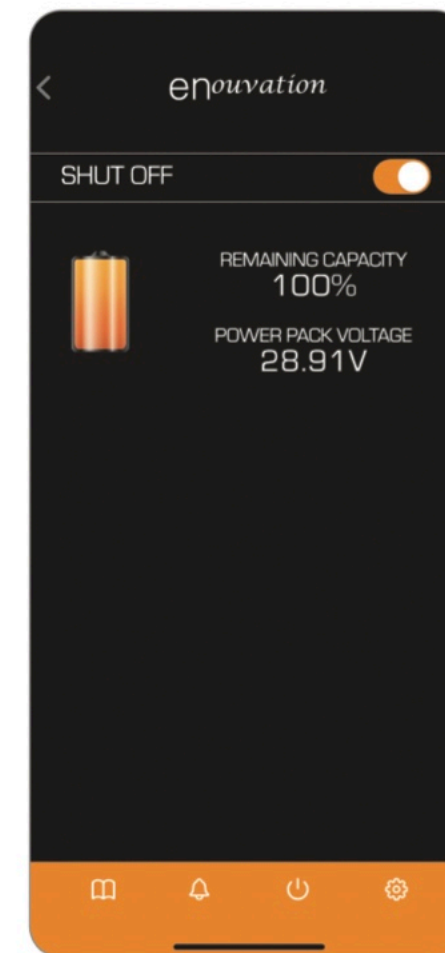


The homescreen shows your current  
capacity and voltage.

You can also turn the Pack ON  
and OFF.


### 3 View/Manage Charging History




This menu allows you to see Charging History.

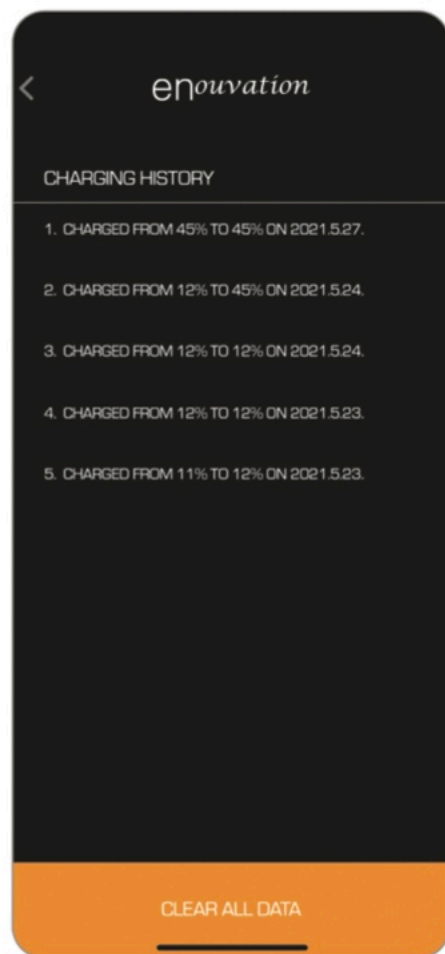

The most recent charge will be listed at the top.

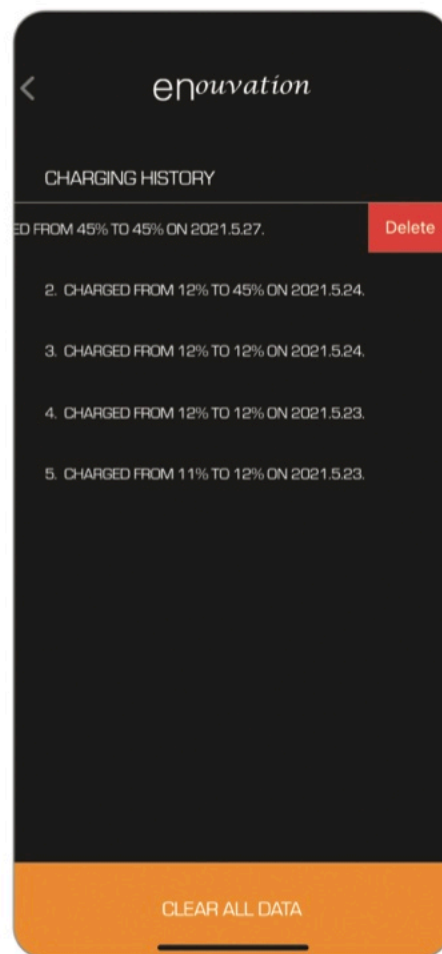

To delete an entry, swipe to the left to reveal a delete button. Tap delete to remove it from the list.

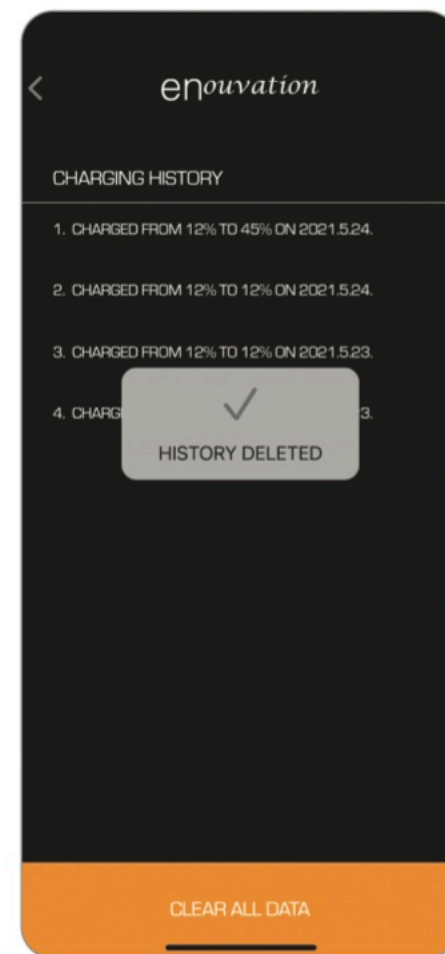


You can clear all data by tapping CLEAR ALL DATA from the bottom of the screen.




History is deleted. New data will appear when you finish your next recharge only AFTER you disconnect from the Enouvation charger.

REMINDER: Only use the Enouvation charger when recharging.


#### 4 Set Notifications for Low Power Alerts

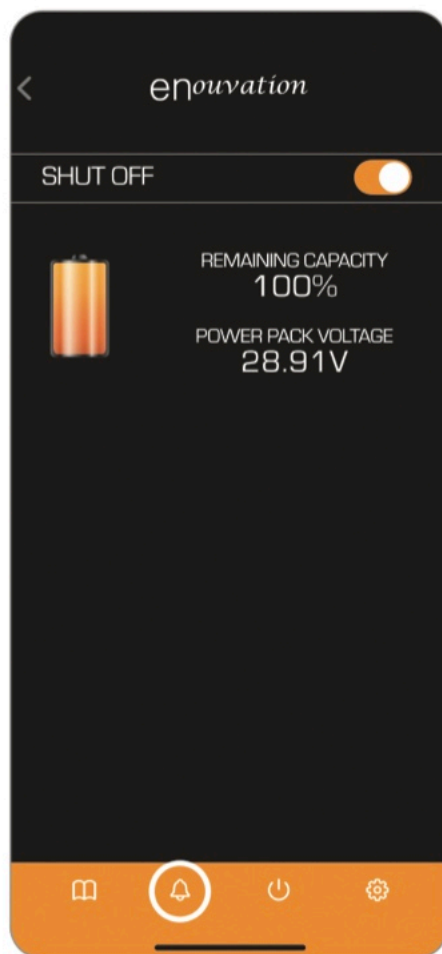


Tap the bell icon. This App alert will notify you when the Pack has reached the selected charge level.

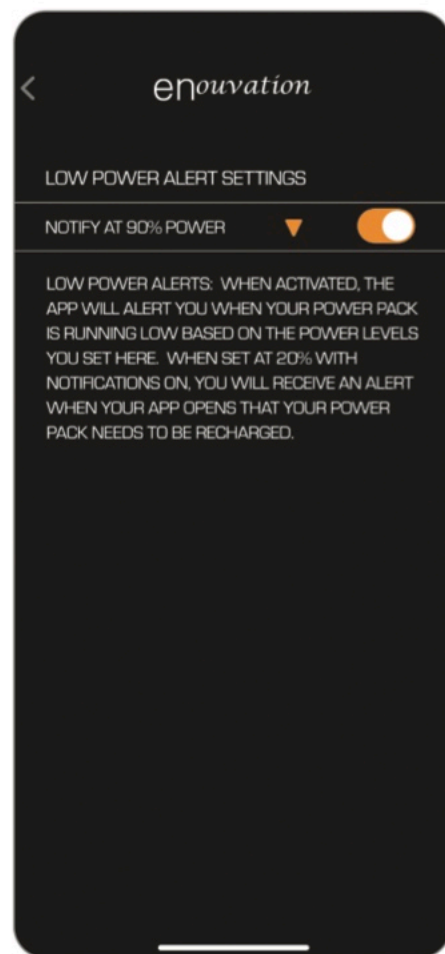

Select the orange arrow.

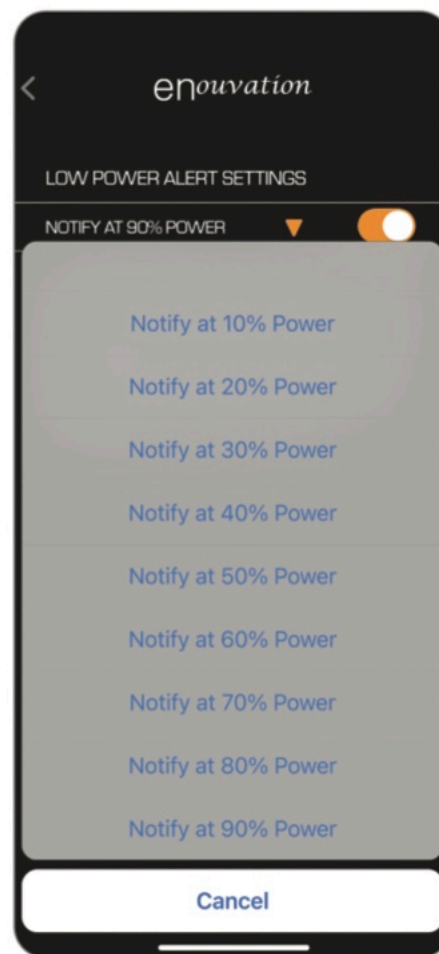


Select the notification level from the list. We've selected "Notify at 20% Power."

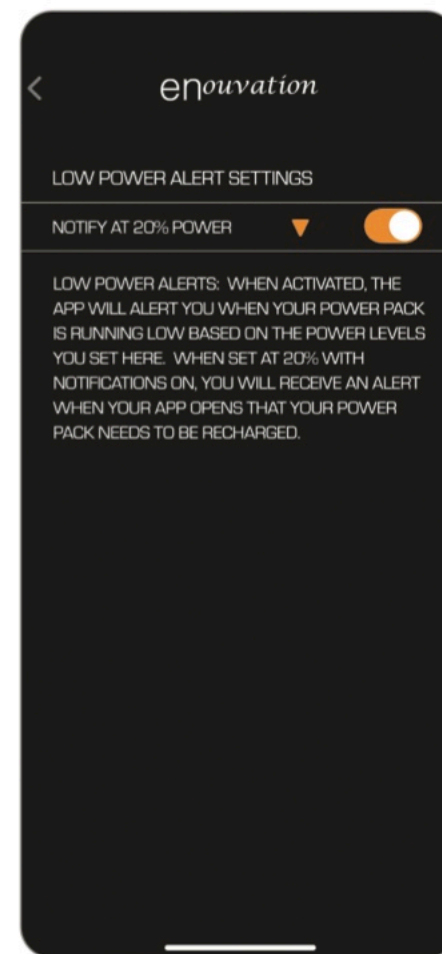

The selected notification level will appear on the menu bar. The initial reminder will display only when the App is opened.



## 5 Turn On/Off

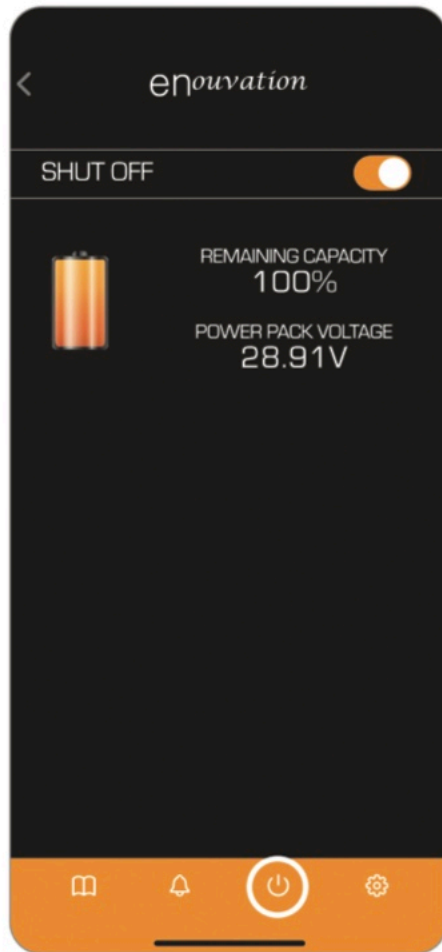

The Shut Off setting allows you to shut down the Power Pack.

Yes, this is a duplicate area to power down your Pack.


## 6 Manage Notifications




To turn OFF, swipe the button left.

To turn ON, swipe right.

## 7 Check/Update Firmware

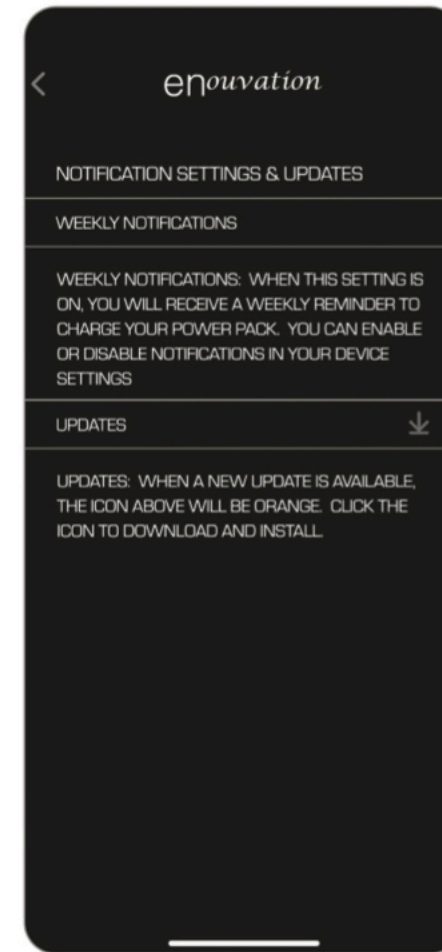

A weekly notification will remind you to charge your pack. Turn ON/OFF notifications in your device settings.

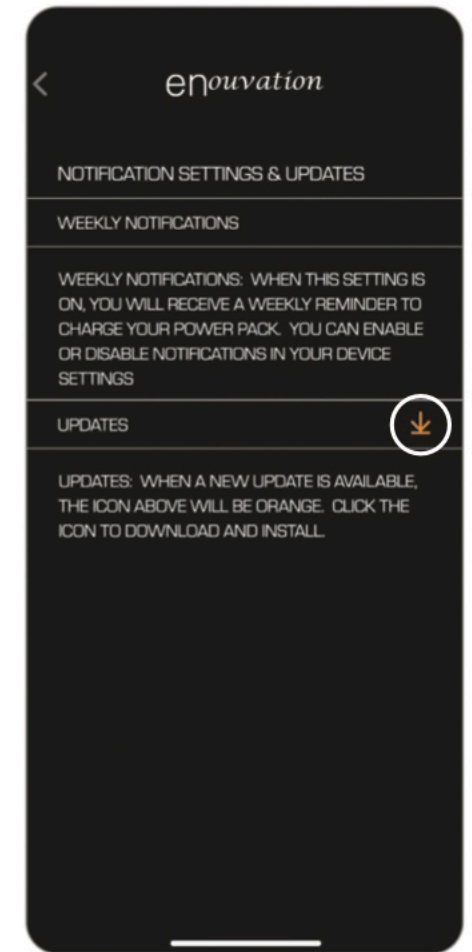

Firmware updates can be downloaded from this menu when they become available.

Updates can be downloaded if the download icon glows orange.